

MUF100C

# Out shooting portable tripod

Ver: A


# **USER MANUAL**

SWIT Electronics Co.,Ltd.




Thank you for choosing SWIT products, please read this user manual before using and keep it properly for future reference.

## **Appearance**

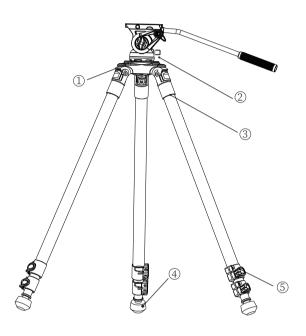

MUF100C

- 1.Main frame
- 2. Connecting plate
- 3. Angle adjustment button
- 4. Changeable feet nail
- 5.Buckle
- 6.Standard bolt
- 7. Quick release plate safety switch
- 8.Accessories installation bolt
- 9. Handle installation port

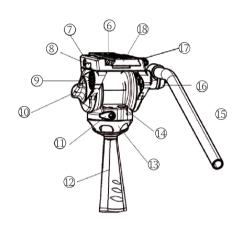

TH100 Fluid head

- 10. Pitch damping knob
- 11. Horizontal damping lock knob
- 12.Hand knob
- 13.Ball arm
- 14.Bubble level
- 15.Handle
- 16.Handle lock knob
- 17. Quick release lock bolt.
- 18. Quick release plate

# **Model & Specification**

| Model                 | MUF100C  |
|-----------------------|----------|
| Material              | Aluminum |
| Tube Diameter(mm)     | 29.4-39  |
| Self-weight(kg)       | 4.83     |
| Load(kg)              | 10       |
| Fluid head            | TH100    |
| Number of feet socket | 3        |
| Fold height(cm)       | 82.5     |
| Height(cm)            | 40-170   |

Tips: Manual measurement has an error of 1-2cm, please refer to the actual object, thank you for understanding.

# **Packing list**

| No. | Description         | Quantity |
|-----|---------------------|----------|
| 1   | Tripod kit          | 1        |
| 2   | Quick release plate | 1        |
| 3   | Accessories tool    | 1        |
| 4   | Fluid head          | 1        |

### **Directions**

#### 1.Camera installation

- SLR camera or camcorder can be installed.
- 1) Rotate the lock knob for release quick release plate counterclockwise.
- 2) Press the safety switch and take out the quick release plate.
- 3 Chosse 1/4 or 3/8 bolt to lock the device according to your requirement.
- 3 Press the quick release plate diagonally into the platform from the direction of the safety bolt.Turn the knob to lock.

#### 2.Accessories & other device installation

The external nut can be connected with the rocker arm, display LED lights and other equipment. Choose 1/4 or 3/8 screw according to the equipment you have, you can locking with the coin in the tool kit.

#### 3. Handle installation

- 1) Rotate the handle lock button counter clockwise And remove the handle.
- ② Re install the handle on the left or right handle Install the handle according to vour use habit.

### 4. Adjust the Angle of the cradle head

(1) The pitch Angle of the holder can be adjusted between +90 degrees and -70 degrees by adjusting the pitch damping knob. Under the condition of low damping, Quick release plate safety switch



Take out the quick release plate

Lock knob



Install quick release plate

Left handle Installation Port



5. The use of the bubble level

shooting.

The tripod will be perpendicular to the ground when Bubble inside the level is in the most middle position.

the PTZ will automatically return to the

(2) By adjusting the horizontal damping locking

head can be adjusted to achieve a 360-degree

button, the horizontal Angle of the cradle


horizontal state after being used.

### 6. Unfold and fold the tripod

- (1) Pull open the buckle and the foot frame will slide automatically. According to the required height, buckle the buckle again to fix the height of the foot frame.
- (2) Open the pins of the tripod to an appropriate Angle. For the foot of fixed middle tube, only fixed Angle can be selected. The Angle can be adjusted for a moving tube or a leg that extends to the ground.

#### 7. Nail conversion

On loose ground, can use foot nail to increase tripod stability. Rotate the rubber part of the convertible foot pin to switch between the foot nail and the rubber foot. When switching, make sure to rotate to a position that cannot be rotated, but do not use brute force to avoid damage to the tripod.

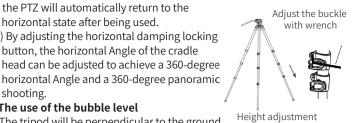





Foot nail & Rubber feet conversion

### **Notice**

- 1. Do not use at temperatures below minus 40°C and above 70°C.
- 2. When in damp, sand and dust environment, please wipe dry with dry cloth after use When in a rain environment, after use, please pull the pin to full elongation Until the inside of the pin is dry and then closed; Not recommended for use in seawater.
- 3. Do not carry camera or photography equipment on the tripod.
- 4. The product does not need to be equipped with lubricating oil, do not add improper lubricating products without authorization, if necessary, use standard lubricants and oils Or please call our customer service hotline +49(0)2131 6632331 for consultation.
- 5. Please do not disassemble the product under the guidance of non-professionals. If you have any questions, please call SWIT

- customer service hotline +49(0)2131 6632331.
- 6. In order to ensure personal safety, do not use this product with live products, high voltage equipment and strong chemical
- 7. When adjusting the device, do not exert too much force to avoid component damage.
- 8. Do not exceed the maximum load (see parameter description).
- Do not expose the product to the sun or high temperature for a long time in the car or under the glass.
- 10. When working, do not let the product be seen in a dangerous public place out of the reach of children.

# Common problems and solutions

| Faults   | Reason   | Treatment  |
|--|--|--|
| The head shaking   | The head is not connect to the tripod                                      | Connect the head with the tripod   |
| The foot tube slides loose   | The buckle is not fastened well  | Fasten the clasp or lock the clasp with a medium wrench  |
| Quick release plate can not be removed   | Lock knob not loosened/<br>Failure to press safety bolt                    | Loose the lock knob, and press the safety bolt, simultaneously pull out the quick release plate            |
| Open the buckle foot tube and cannot fall by itself                                      | Foreign matter between the wall of the foot tube,or flip lock is too tight | Check if it has foreign matter or loose the flip clock appropriately.                                      |
| After installing the equipment, The head tilt forward or backward                        | Quick release plate is not in the right place                              | Adjust the front and back position of the quick release plate until the platform is in a horizontal state. |
| Quick release plate can not be inserted, or the safety bolt loses its protective effect. | Insertion direction of quick release plate is wrong                        | Keep the arrows at the bottom of the quick release plate in the same direction as the head.                |

# Contact

If you have any comments and suggestions about this product, you can contact us through the following ways to give us feedback. Your comments are valuable resources for our growth. Thank you very much!

Customer service hotline: +49(0)2131 6632331

E-mail: info@swit-europe.com (European office) /Contact@swit.cc (China headquarters)